



RYAN
STONE
CREATIONS

Natural Flexible Stone

www.thinslateveneer.com

Slate/Marble/Sandstone

Installation Instructions

Preconditions

Tools needed

Installation steps

Metal profile options



INSTALLATION PRECONDITIONS



Flatness

Ensure there is no obvious bump on the surface of the substrate.

Temperature

For optimal application, ensure the temperature is above 50°F (10°C) during installation.

A heat gun is recommended to help expedite the flattening of the product when it is rolled up, especially in low temperatures. stone veneers are heat-resistant up to 400°F (205°C).

Saw We recommend using a circular saw or track saw for cutting.

*A 60-tooth carbide tipped blade is rec'd.

Do not use a diamond blade.

Adhesive Use qualified adhesive for the non-translucent collection and waterproof adhesive for wet or outdoor applications.

Others Measure tool, Pen/pencil, Pressure roller, Masking tape, and metal profiles if needed.



Saw



Adhesive



Measure



Pencil



Roller



Masking tape

INSTALLATION STEPS

1 Unboxing Preparation

Remove the products from the box. If they are rolled up, lay them flat on the ground.

This process may take up to 48 hours, typically taking longer in lower temperatures.

It's normal for the stone surface to exhibit slight flaking during unboxing and installation.

*A heat gun is recommended to help expedite the flattening process.



2 Measurement and Marking

Measure the desired size on the veneers and mark where you need to make cuts.



3 Cutting with Precision

Use a circular saw or track saw to cut the sheets to your desired dimensions.




4 Surface Preparation

Ensure the substrate where you intend to apply stone veneers is clean. Remove dust and ensure there are no significant bumps on the surface.




5 Masking before Adhesive Application

Cover all the edges of the veneers with masking tape to prevent the adhesive from staining the stone surface during application.

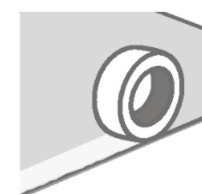

6 Adhesive Application

Apply qualified adhesive to the entire back of the product or the substrate surface. (For wet or outdoor applications, use waterproof adhesive).

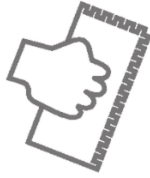

7 Enhancing Adhesion

Use a pressure roller to enhance the adhesion of the products to the wall or other substrates.



8 Grout Application Guide

If you choose to use grout over metal trims between the veneers, make sure to use masking tape again to cover the edge of the veneers and leave the desired gap (1/16" to 1/8" recommended) for clean grout. Then use a grout gun with grout of your preferred color. A silicone grout is recommended.



9 Drying Period

Allow it to dry for up to 24-48 hours (depending on the adhesive used and temperature).



10 Completion



Installation is complete — your space is now ready for its new natural look!





METAL PROFILE OPTIONS (OPTIONAL)

Metal Profile can be added as per design preference and for aesthetic appeal.

A T-Shape Profile

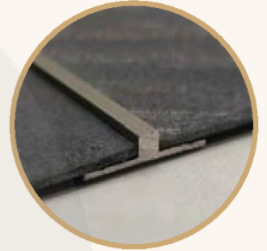

B L-Shape Profile

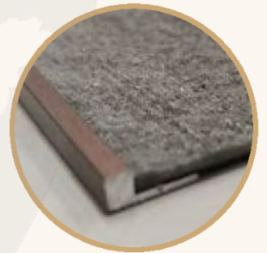

C Outside Corner Profile



D Inside Corner Profile

